

Synchronous Boost Converter with Ultra-Low IQ

General Description

The ET82099 device is a synchronous boost converter with less than 1µA ultra-low quiescent current. The device is designed for products powered by an alkaline battery, lithium battery or rechargeable Li-lon battery, for which high efficiency under light load condition is critical to achieve long battery life operation.

The ET82099 offers adjustable output voltage. Hysteric control topology has been employed to obtain maximal efficiency at minimal quiescent current. ET82099 consumes only 1μ A quiescent current in sleep mode and can achieve up to 80% efficiency at 100μ A load. It can also support up to 300mA output current from 3.3V to 5V conversion, and achieve up to 93% at 200mA load.

The ET82099 supplies both Down Mode and Pass-Through operations for different applications. In Down Mode, the output voltage can still be regulated at target value even when input voltage is higher than output voltage. In Pass-Through Mode, the output voltage follows input voltage.

The ET82099 exits Down Mode and enters into Pass-Through Mode when V_{IN} > V_{OUT} +0.35V. The ET82099 supports true shutdown function when it is disabled, which disconnects the load from the input supply to reduce the current consumption. They are available in WCSP6 ,DFN6 and SOT23-6 Package.


Features

- 250nA Ultra-Low IQ into VIN Pin
- 500nA Ultra-Low IQ into VOUT Pin
- Operating Input Voltage from 0.7V to 5.5V
- Adjustable Output Voltage from 1.8V to 5.5V
- Minimum 0.8A Switch Peak Current Limit
- Regulated Output Voltage in Down Mode
- True Disconnection During Shutdown
- Up to 80% Efficiency at 100µA Load with 3.8V VIN and 5V Output
- Up to 93% Efficiency

Device Information

Part No.	Package	Size
ET82099	WLCSP6	1.15mm×0.83mm
ET82099Y	DFN6 2.0mm×2.0	
ET82099S	SOT23-6	2.926mm×2.8mm


Pin Configuration

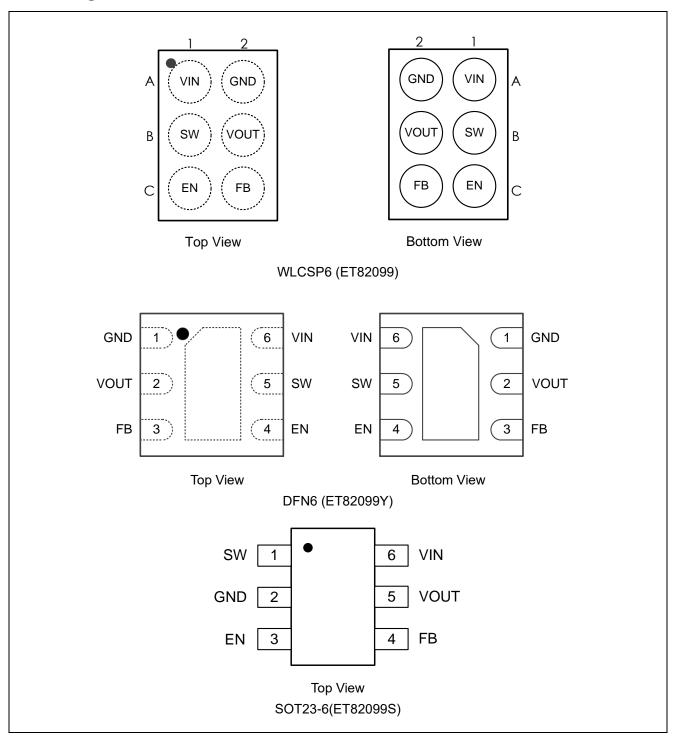

Pin Function

Pin	Pin No.		Tuna	Description		
Name	WLCSP6	DFN6	SOT23-6	Туре	Description	
VIN	A1	6	6	IN	IC power supply input	
SW	B1	5	1	PWR	Switch pin of the converter	
					Enable logic input, Logic high voltage enables the	
EN	C1	4	3	IN	device; logic low voltage disables the device.Don't let	
					it floating	
GND	A2	1	2	PWR	Ground	
VOUT	B2	2	5	PWR	Boost converter output.	
FB	C2	3	4	IN	Voltage feedback of adjustable output voltage.	

Block Diagram

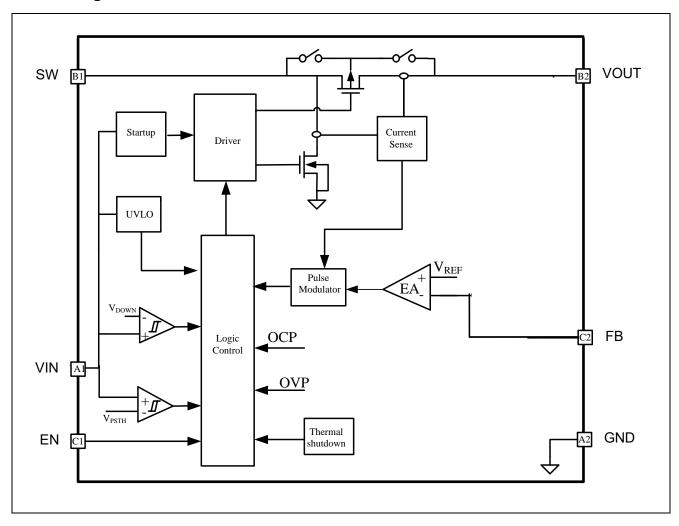

Functional Description

Boost Controller Operation

The ET82099 boost converter is controlled by a hysteretic current mode controller. This controller regulates the output voltage by keeping the inductor ripple current constant in the range of 300mA and adjusting the offset of this inductor current depending on the output load. Since the input voltage, output voltage and inductor value all affect the rising and falling slopes of inductor ripple current, the switching frequency is not fixed and is determined by the operation condition. If the required average input current is lower than the average inductor current defined by this constant ripple, the inductor current goes discontinuously to keep the efficiency high under light load condition. If the load current is reduced further, the boost converter enters into Burst mode.

In Burst mode, the boost converter ramps up the output voltage with several switching cycles. Once the output voltage exceeds a setting threshold, the device stops switching and goes into a sleep status. In sleep status, the device consumes less quiescent current. It resumes switching when the output voltage is below the setting threshold. It exits the Burst mode when the output current can no longer be supported in this mode.

To achieve high efficiency, the power stage is realized as a synchronous boost topology. The output voltage VOUT is monitored via an external or internal feedback network which is connected to the voltage error amplifier. To regulate the output voltage, the voltage error amplifier compares this feedback voltage to the internal voltage reference and adjusts the required offset of the inductor current accordingly.

Under-Voltage Lockout

An under-voltage lockout (UVLO) circuit stops the operation of the converter when the input voltage drops below the typical UVLO threshold of 0.4V. A hysteresis of 200mV is added so that the device cannot be enabled again until the input voltage goes up to 0.6V. This function is implemented in order to prevent malfunctioning of the device when the input voltage is between 0.4V and 0.6V.

Enable and Disable

When the input voltage is above UVLO rising threshold and the EN pin is pulled to high voltage, the ET82099 is enabled. When the EN pin is pulled to low voltage, the ET82099 goes into shutdown mode. In shutdown mode, the device stops switching and the rectifying PMOS fully turns off, providing the completed disconnection between input and output. Less than 0.5µA input current is consumed in shutdown mode.

Soft Start

After the EN pin is tied to high voltage, the ET82099 begins to startup. At the beginning, the device operates at the boundary of Discontinuous Conduction Mode (DCM) and Continuous Conduction Mode (CCM), and the inductor peak current is limited to around 200mA during this stage. When the output voltage is charged above approximately 1.6V, the device starts the hysteric current mode operation. The soft start function reduces the inrush current during startup. After VOUT reaches the target value, soft start stage ends and the peak current is determined by the output of an internal error amplifier which compares the feedback of the output voltage and the internal reference voltage.

The ET82099 is able to start up with 0.7V input voltage with larger than $3k\Omega$ load. However, if the load during startup is so heavy that the ET82099 fails to charge the output voltage above 1.6V, the ET82099 can't start up successfully until the input voltage is increased or the load current is reduced. The startup time depends on input voltage and load current.

Current Limit Operation

ET82099 features cycle-by-cycle over current protection function. If the inductor peak current reaches the current limit threshold ILIM, the main switch turns off so as to stop further increase of the input current. In this case the output voltage will decrease until the power balance between input and output is achieved. If the output drops below the input voltage, the ET82099 enters into Down Mode. The peak current is still limited by ILIM cycle-by-cycle in Down Mode. If the output drops below 1.6V, the ET82099 enters into startup process again. In Pass-Through operation, current limit function is not enabled.

Output Short-to-Ground Protection

If short to ground condition occurs, the short current is limited at about 85mA. Once the short condition is removed, the ET82099 goes back to soft start again and regulates the output voltage.

Over Voltage Protection

ET82099 has an output over-voltage protection (OVP) to protect the device in case that the external feedback resistor divider is wrongly populated. When the output voltage exceeds the OVP threshold of 5.8V, the device stop switching. Once the output voltage falls to 0.1V below OVP threshold, the device starts operating again.

Down Mode Regulation and Pass-Through Operation

The ET82099 features Down Mode and Pass-Through operation when input voltage is close to or higher than output voltage.

In the Down Mode, output voltage is regulated at target value even when V_{IN} > V_{OUT} . The control circuit changes the behavior of the rectifying PMOS by pulling its gate to input voltage instead of to ground. In this way, the voltage drop across the PMOS is increasing as high as to regulate the output voltage.

The power loss also increases in this mode, which needs to be taken into account for thermal consideration. In the Pass-Through operation, the boost converter stops switching.

The rectifying PMOS constantly turns on and low side switch constantly turns off. The output voltage is the input voltage minus the voltage drop across the dc resistance (DCR) of the inductor and the on-resistance of the rectifying PMOS.

With V_{IN} ramping up, the ET82099 goes into Down Mode first when V_{IN} > V_{OUT} -100mV. It stays in Down Mode until V_{IN} > V_{OUT} +0.35V and then goes automatically into Pass-Through operation. In the Pass-Through operation, output voltage follows input voltage.

The ET82099 exits Pass-Through Mode and goes back to Down Mode when V_{IN} ramps down to 103% of the target output voltage. It stays in Down Mode until input voltage falls to 150mV below the output voltage, returning to normal operation.

Absolute Maximum Ratings

Over operating free-air temperature range (unless otherwise noted)(1)

Symbol	Parameters	Min	Max	Unit
V	VIN, SW, VOUT, FB, EN	-0.3	6	V
V _{IO}	Voltage range at terminals ⁽²⁾	-0.3		V
	Human Body Model	±4000		V
V _{ESD}	(JEDEC JS-001,All Pins)			
	Charged Device Model	jed Device Model		V
	(JESD22-C101,All Pins)		±1000	V
l _{LU}	Max Latch up current	±300		mA
	(JESD78E,All Pins)		±300	шА
TJ	Operating junction temperature	-40	150	ပ္
T _{STG}	Storage temperature range	-65	150	°C

Notes:

(1) Stresses beyond those listed under Absolute Maximum Ratings may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under Recommended Operating Conditions is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.


(2) All voltage values are with respect to network ground terminal.


Electrical Characteristics

 T_A = -40°C to 85°C and V_{IN} = 0.7V to 5.5V. Typical values are at V_{IN} = 3.7V, T_A = 25°C, unless otherwise noted.


Symbol	Parameters	Test Conditions	Min	Тур	Max	Unit		
Power Supply								
V _{IN}	Input voltage range		0.7		5.5	V		
Vuvlo	Input under voltage lockout threshold	V _{IN} rising		0.6	0.7	V		
	Quiescent current into VIN pin	EN = H, no Load, no Switching T _A = -40°C to 85°C		0.25	1.1	uA		
lα	Quiescent current into VOUT pin	EN = H, no Load, no Switching, Boost or Down Mode T _A = -40°C to 85°C	0.2	0.5	1.5	uA		
I _{SD}	Shutdown current into VIN pin	EN = L, V_{IN} = 3.7V, V_{OUT} = 0V, T_A = -40°C to 85°C		0.5	1.4	uA		
Output			1					
V _{OUT}	Output voltage range		1.8		5.5	V		
V _{REF}	Feedback reference voltage	V _{IN} < V _{OUT} , PWM mode	0.98	1	1.02	V		
V _{OVP}	Output over-voltage protection threshold	Vout rising 1 5 6 1		5.8	6	V		
I _{FB_LKG}	Leakage current into FB pin V _{FB} = 1.0V		10	50	nA			
Power Swi	tch		·L					
R _{DS(on)_LS}	Low side switch on resistance	V _{OUT} = 3.3V		300		mΩ		
R _{DS(on)_HS}	Rectifier on resistance	V _{OUT} = 3.3V		350		mΩ		
I _{LH}	Inductor current ripple	V _{OUT} = 3.3V		300		mA		
I _{LIM}	Current limit threshold	V _{OUT} ≥ 2.5V, boost operation		1		Α		
Isw_LKG	Leakage into SW Pin (No switching)	V_{SW} = 5.0V, no switch, T_A = -40°C to 85°C			200	nA		
Control Lo			1					
V _{IL}	EN input low voltage threshold	V _{IN} ≤ 1.5V V _{IN} > 1.5V	0.2×V _{IN} 0.4			V		
V _{IH}	EN input high voltage threshold	V _{IN} ≤ 1.5V V _{IN} > 1.5V			0.8×V _{IN}	V		
I _{EN_LKG}	J	V _{EN} = 5.0V			50	nA		
Тотр	Over temperature protection			150		°C		
Тотр_нуѕ	Over temperature hysteresis			25		°C		


Typical Characteristics

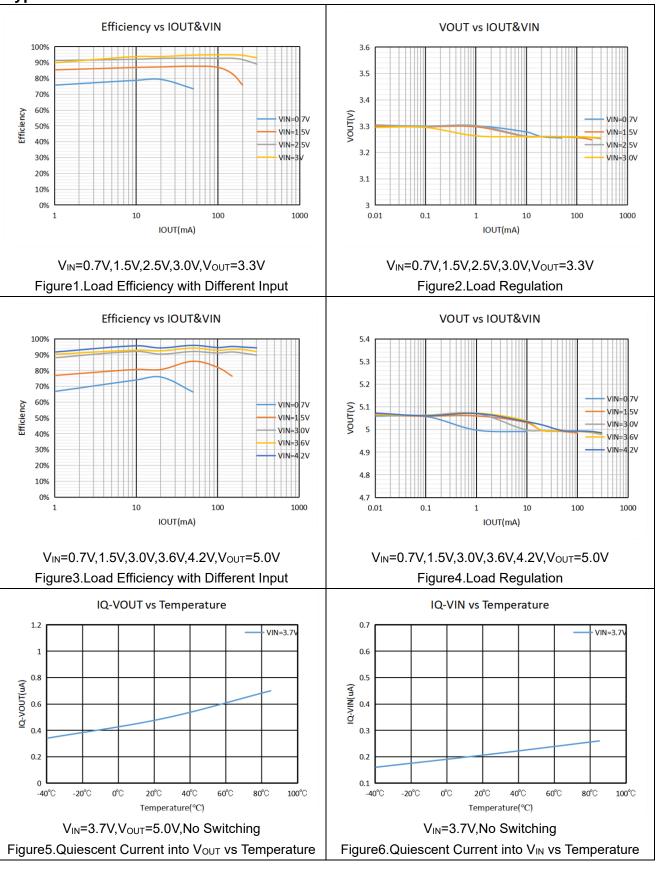


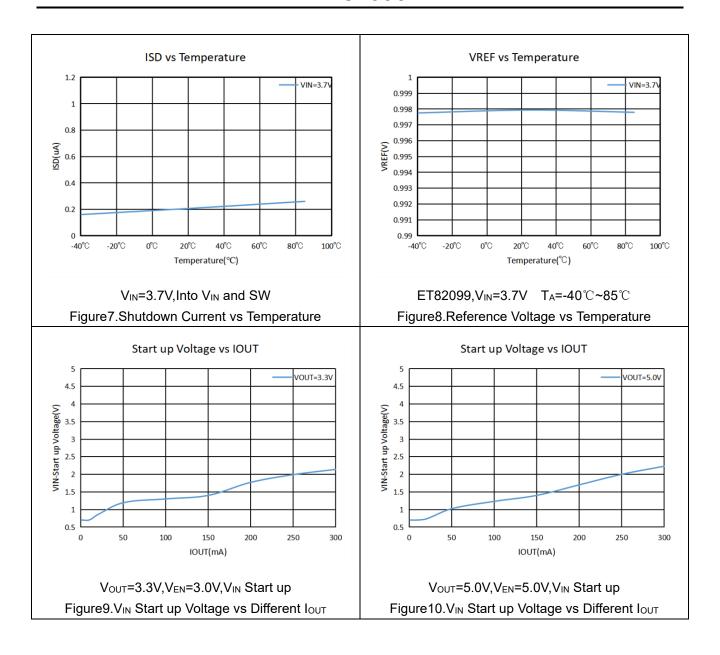


Application Curves

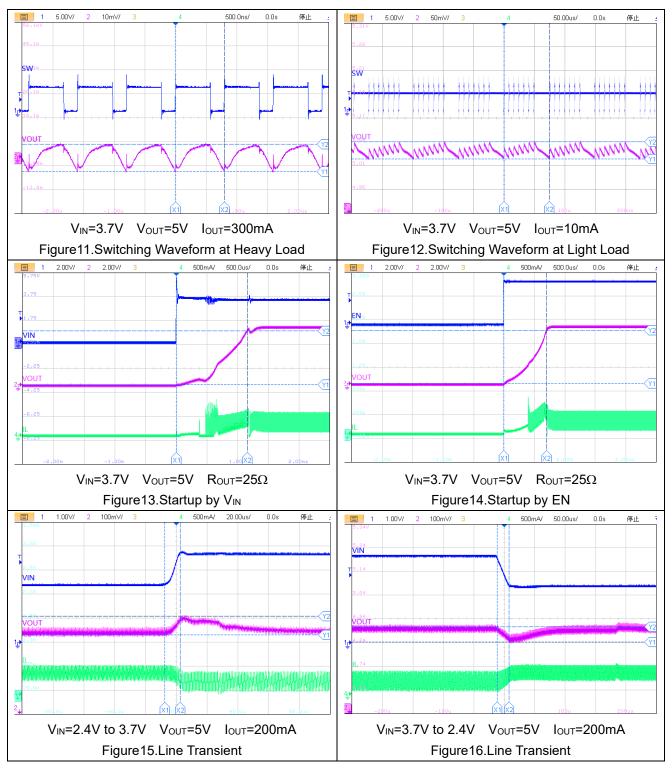

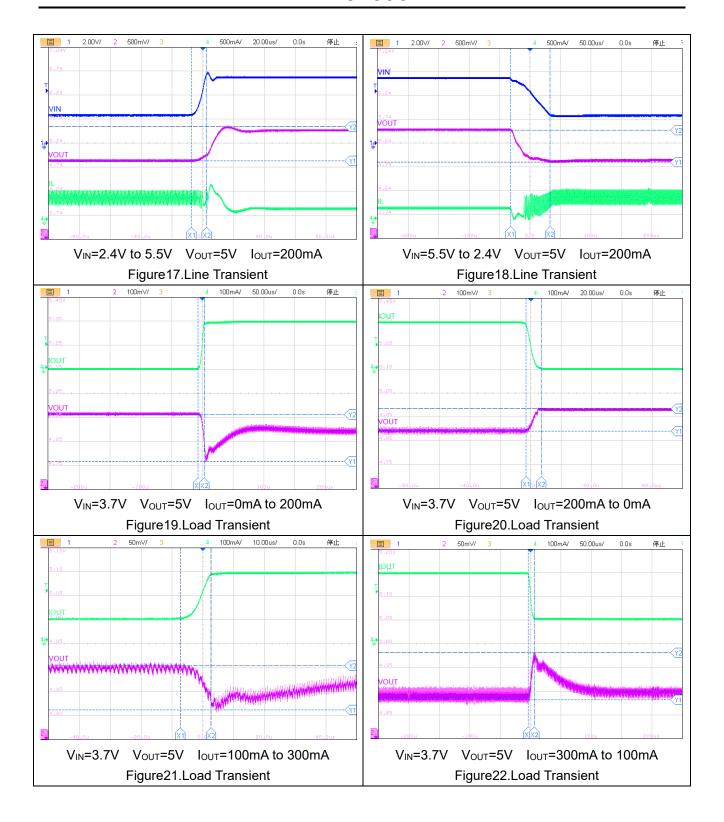

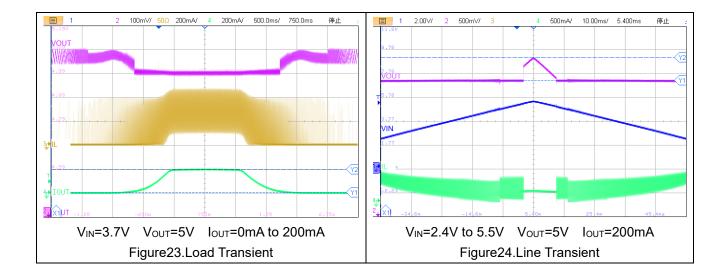

Application Circuits

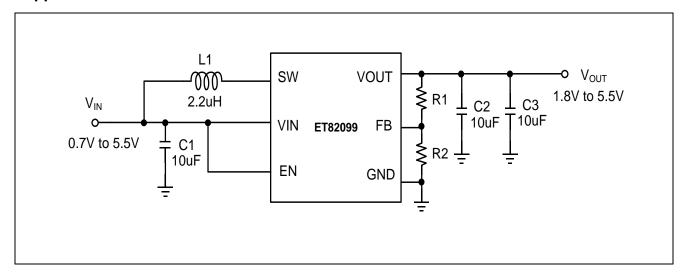


Note*: Vout=VREF×(1+R1/R2), VREF=1.0V

Application Recommend


Part No.	Output Voltage	R1	R2
	2.50V	374kΩ	249kΩ
ET82099	3.00V	499kΩ	249kΩ
ET82099Y	3.31V	576kΩ	249kΩ
ET82099S	3.61V	649kΩ	249kΩ
	4.48V	866kΩ	249kΩ
	5.02V	1000kΩ	249kΩ

Package Dimension

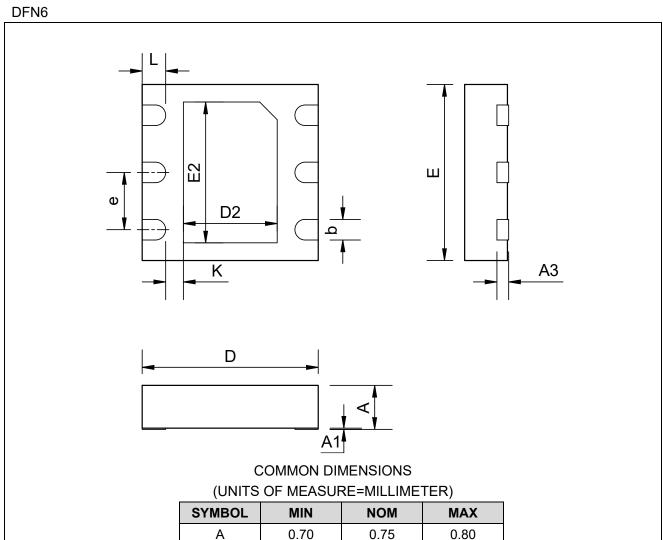


SYMBOL	MIN	MIN NOM		
Α	0.70	0.75	0.80	
A1	0.00	0.02	0.05	
A3	0.20REF			
b	0.25	0.35	0.45	
D	1.90	2.00	2.10	
Е	1.90	2.00	2.10	
D2	0.65	0.80	0.90	
E2	1.35	1.50	1.60	
е	0.65BSC			
L	0.30	0.35	0.40	
k	0.20			

SOT23-6

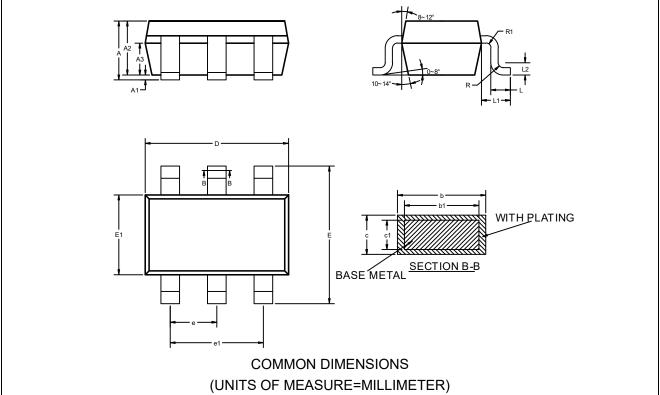

SYMBOL	MIN	NOM	MAX		
Α	_	_	1.250		
A1	0	_	0.150		
A2	1.000	1.100	1.200		
A3	0.600	0.650	0.700		
b	0.360	_	0.450		
b1	0.350	0.380	0.410		
С	0.140	_	0.200		
c1	0.140	0.150	0.160		
D	2.826	2.926	3.026		
Е	2.600	2.800	3.000		
E1	1.526	1.626	1.726		
е	0.900	0.900 0.950			
e1	1.800	1.800 1.900			
L	0.300 0.400		0.500		
L1	0.590REF				
L2	0.250BSC				
R	0.050	_	0.200		
R1	0.050	_	0.200		

WLCSP6

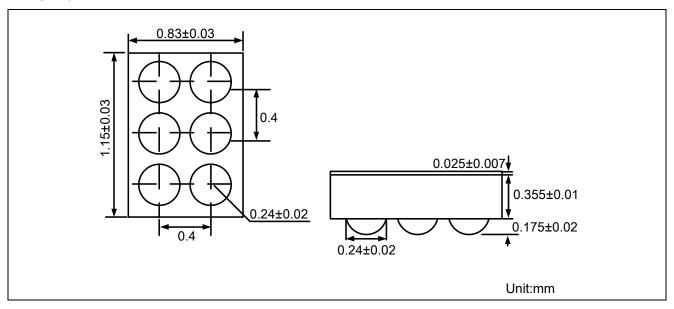

Revision History and Checking Table

Version	Date	Revision Item	Modifier	Function & Spec Checking	Package & Tape Checking
0.0	2020-03-12	Preliminary Version	Xielh	Xielh	Zhujl
0.1	2020-12-15	Update Package Size	Xielh	Xielh	Zhujl
1.0	2021-5-7	Initial Version	Xielh	Xielh	Zhujl
1.1	2021-10-9	Add Part No. Information	Xielh	Xielh	Zhujl
1.2	2022-6-10	Add Part Information and Typical Characteristics	Xielh	Xielh	Zhujl
1.3	2022-6-20	Update Typesetting	Shibo	Xielh	Zhujl
1.4	2022-9-20	Add DFN6 package	Shibo	Xielh	Zhujl
1.5	2023-4-17	Add SOT23-6 package	Shibo	Xielh	Zhujl
1.6	2024-2-21	Update AMR	LiuCong	Xielh	Zhujl